

Application of Reflective Sticker

* Do not take off paper backing before reading the steps for proper application of reflective stickers.

Make sure surface is clean, dry, cool, out of direct sunlight at time of application and the sticker is the correct dimensions for the surface it is being applied to before starting any of the steps.



SURFACE MUST BE CLEAN BEFORE APPLICATION
*If surface is not clean the sticker will not stick properly.





Front of Pipe

Step 1:
Find clean surface to apply sticker.



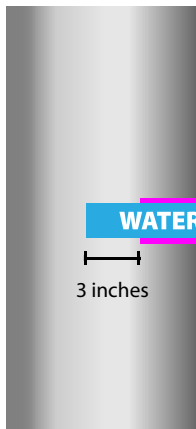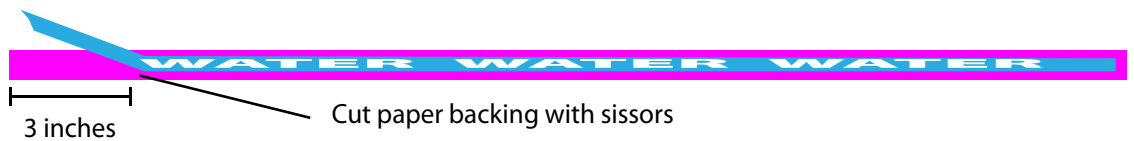

Step 2:
Peel approx. 3 inches of paper off of sticker.
Cut paper backing with sissors.


 Sticker
 Paper Backing



Back of Pipe


Step 3:
Apply exposed sticker to the pipe/surface by starting with furthest end. Smooth with soft straight edge as applied. Avoid wrinkles and stretching.

 Pipe
 Sticker
 Paper Backing
 Soft Edge Squeegee

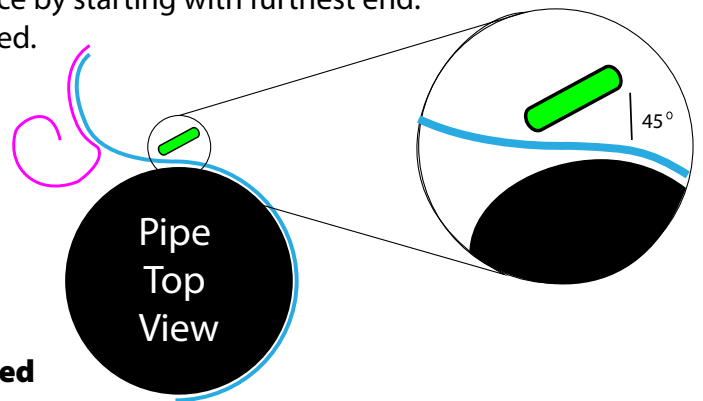

Cut access paper backing as needed

DO NOT PULL TIGHT - This will stretch and distort the sticker.

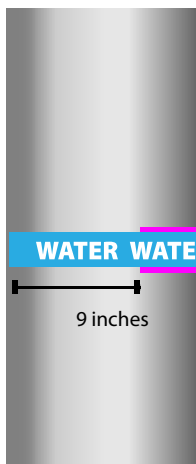

Side of Pipe

Step 4:
Once the sticker has been properly started, peel another 6 inches of the paper backing off of the sticker on the end that has already been applied to surface and contune applying.

Use straight edge to smooth sticker from the end that is already applied to surface and move toward open end.

Step 5:
Slowly peel the rest of the paper backing from the sticker as it is applied to the surface also while still using the straight edge.

Step 6:
Once sticker has been fully applied to surface use straight edge on the surface of the sticker to make sure all edges are properly applied.